

REPLACEMENT PARTS GUIDE

6E Series - 6100E Tractors (South America Edition)



TRANSMISSION



OIL FILTER

[AL221066](#)

Replace initially after 100 hours and after every 750 hours.

HYDRAULIC



OIL FILTER

[AL203061](#)

Replace initially after 100 hours and after every 750 hours.

ENGINE



PRIMARY AIR FILTER

[AL172780](#)



SECONDARY AIR FILTER

[AL150288](#)

Replace every 250 hours and annually.



OIL FILTER

[RE59754](#)

Replace initially after 100 hours and every 375 hours, every 500 hours and annually.



PRIMARY FUEL FILTER

[DQ24057](#)



FINAL FUEL FILTER

[RE62418](#)

Replace after every 500 hours.

CAPACITIES

6E Series - 6100E Tractors (South America Edition)

CAPACITIES (Approximate):

Fuel Tank:

6100E 185 L (48.9 gal)

Cooling System:

Cool-Gard™ II

6100E 12.5 L (3.17 gal)

Transmission and Hydraulic System:

Hy-Gard™

..... 65.4 L (17.3 gal)

Front Axle:

Hy-Gard™

Front Axle Differential Housing 8.2 L (2.3 gal)

Front Axle Final Drive Housing (each) 0.75 L (0.2 gal)

REPLACEMENT PARTS GUIDE

6E Series - 6100E Tractors (South America Edition)

CAB



SEAT

[MN10233](#) (OOP)

AXLE



TIE ROD

[DQ67133](#) (STEERING CYLINDER AND TIE ROD)

[DQ67134](#) (STEERING CYLINDER AND TIE ROD)

[AL150098](#) (FOOT THROTTLE)



ENGINE



BRAKE DISK

[RE35512](#) (PERMA-CLUTCH)

[AL171954](#) (BRAKE DISK)



ALTERNATOR

[AL219434](#) (W/PULLEY)

[AL166645](#) (14 V/90A)



BATTERY

[SJ10989](#) (WET CHARGED BATTERY)



JOHN DEERE
Genuine Parts and Service