

REPLACEMENT PARTS GUIDE

7425 and 7525 Tractors

ENGINE

PRIMARY AIR FILTER
[AL172781](#)



SECONDARY AIR FILTER
[AL150288](#)

Replace after every 1500 hours or 2 years (whichever comes first) or after 5 cleanings of the primary element. change as required.

OIL FILTER
[RE504836](#)



Change after first 100 hours then after every 250 hours using API-CI oil. If the sulfur level exceeds 0.7%, reduce the service interval by 50%.

FUEL FILTER PRIMARY
[RE515335](#)



SECONDARY FUEL FILTER
[RE62419](#)



Replace every 250 hours.

OIL FILTER
[AL169573](#)

 


Replace after first 100 hours then after 500 hours.



CAB

AIR FILTER
[AL225552](#)



Change as required.

HYDRAULIC

OIL FILTER
[AL221066](#)
[AL156624](#)



Replace after first 100 hours then after 500 hours.

CAPACITIES

7425 and 7525 Tractors

CAPACITIES (Approximate):

Fuel Tank:

7425.....	207 L (54.7 gal)
7525.....	250 L (66 gal)

Cooling System:

Cool-Gard™ II

.....	20 L (5.28 gal)
-------	-----------------

Crankcase with Filter:

Plus-50™ II

.....	19.5 L (5.2 gal)
-------	------------------

Transmission / Hydraulic:

Hy-Gard™

PowrQuad Transmission.....	77 L (20.3 gal)
Extra With Creeper Transmission.....	1 L (0.3 gal)
Extra With Front-Wheel Drive.....	3 L (0.8 gal)

Mechanical Front Wheel Drive (MFWD) Axle Housing:

Hy-Gard™

7425 (APL/AS 2045).....	6.6 L (1.7 gal)
7525 (APL/AS 2060).....	7.0 L (1.8 gal)
7525 (045JD).....	9.5 L (2.5 gal)
7525 (045JDS20).....	10.6 L (2.8 gal)

Mechanical Front Wheel Drive (MFWD) Hubs (Each):

Hy-Gard™

7425 (APL/AS 2045).....	0.8 L (0.2 gal)
7525 (APL/AS 2060).....	1.7 L (0.4 gal)
7525 (045JD).....	2 L (0.5 gal)
7525 (045JDS20).....	2 L (0.5 gal)

REPLACEMENT PARTS GUIDE

7425 & 7525 Tractors

ENGINE



ALTERNATOR
[AL166645](#)



BATTERY
[TY26102](#) (DRY CHARGED BATTERY)



BELT DRIVE
[L153280](#) (LGTH = 1910 mm)
[L153282](#) (LGTH = 2505 mm)

AXLE



TIE ROD
[AL80542](#) (TIE ROD ASSEMBLY)
[AL116558](#) (LH)
[AL116559](#) (RH)
[AL119215](#) (FWD AXLE)
[AL160203](#) (TIE ROD END)
[AL68723](#) (FRONT AXLE)
[AL68724](#) (FRONT AXLE)
[AL150098](#) (MECHANICAL FOOT THROTTLE)



CAB


SEAT



[AP37816](#) (OPERATORS SEAT, OSS)
[SJ12046](#) (OPERATORS SEAT, DELUXE)
[DQ56939](#) (SEAT, CAB)
[AL173569](#) (INSTRUCTIONAL SEAT & SEAT BELT)
[DQ66167](#) (REPAIR KITS FOR COMFORT SEATS)
[DQ62625](#) (SEAT KIT)
[DQ62627](#) (SEAT TRACK KIT)


ENGINE

 BRAKE DISK



[RE35512](#) (HOUSING PLANETARY BRAKE)
[R209938](#) (PLANETARY BRAKE)
[R110628](#) (CREEPER SHIFTER)
[RE186966](#)
[AL160176](#) (MULTIPLE DISK SELF LOCKING DIFFERENTIAL)

 CLUTCH DISK



[RE326609](#)
[RE321692](#) (TRACTION CLUTCH)
[RE326611](#) (MFWD DISK CLUTCH)